


DrainDock®

Multi-Port Drain Adapter

✓ QAI-Certified to ASME A112.18.2, CSA B125.2, NSF 61, and NSF 372



Specifications			
Model:	DD152	DD154	DD158
# of 1/2" FNPT Inlets:	2	4	8
Weight:	7.9 oz	7.7 oz	7.3 oz
Dimensions:	4" D x 4" H		
Material:	Schedule 40 White PVC		
Max Operating Temp:	140° F		
Outlet Options:	Trap adapter; 1.5" pipe; 2" pipe (with coupling)		
<ul style="list-style-type: none"> Rated for both continuous and intermittent internal pressure. Approved for use in vertical orientations Designed for use with water. 			

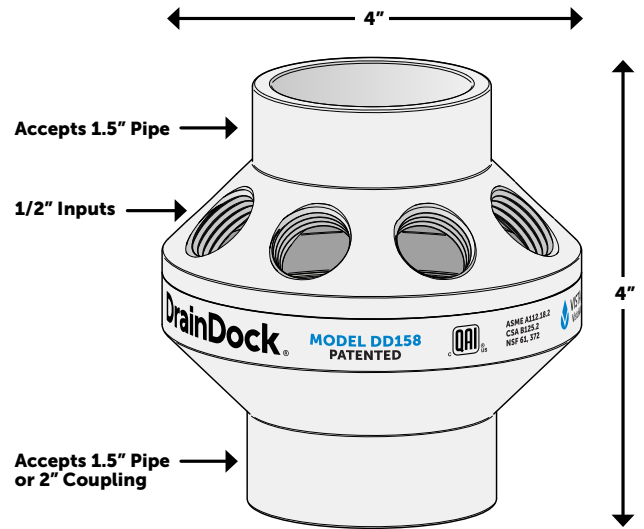

Installation Guidelines

- Follow all applicable local plumbing and building codes.
- Read all instructions before installation and retain for future reference.
- Install in an accessible location for servicing and protect from freezing temperatures.
- Flush debris from piping prior to installation.

Connection & Assembly


- Use PVC primer and solvent cement for all PVC connections.
- Use only PTFE thread tape on threaded fittings. Do not use pipe dope or plumber's putty.
- Install a 1/2" NPT threaded plug in any unused ports.

Threaded Fittings

- DrainDock features female NPT ports; select appropriate 1/2" male NPT fittings as needed (not included).
- Hand-tighten fittings, then tighten no more than 1–2 additional turns.
- Do not overtighten—connections are not under pressure and excessive force may damage fittings.


Warnings

- Do not solder on or near PVC components.
- Do not overtighten fittings into valve ports.

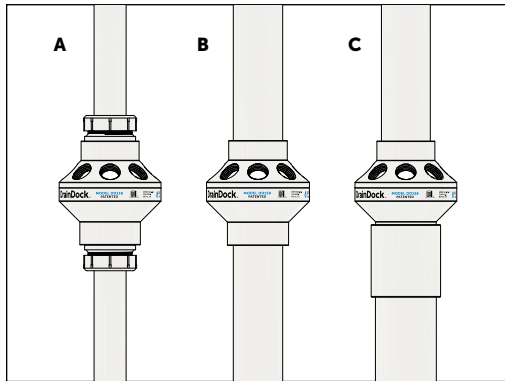

Connection Types

- A. Trap Adapters
- B. Hubs accept 1.5" pipe
- C. Bottom hub sockets into a 2" coupling

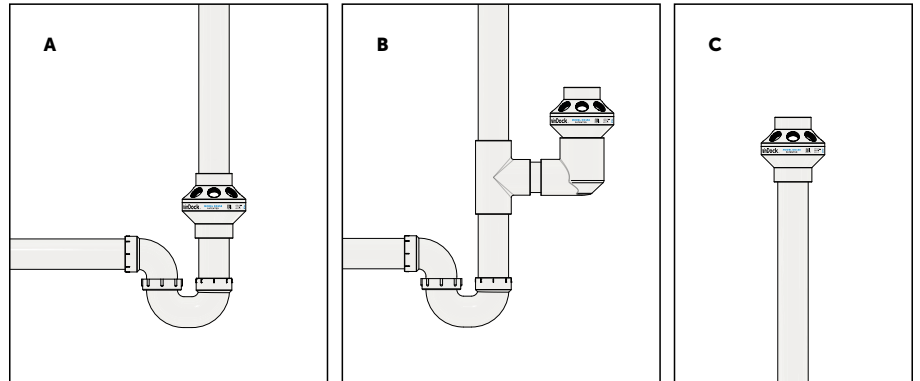

Connection Locations

- A. Inline
- B. Tee off
- C. Parallel drain or standpipe

Warranty

Vista Water Group, LLC (VWG) warrants its products against defects in materials and workmanship for one (1) year from installation or 18 months from manufacture date, whichever occurs first. Defective products will be repaired or replaced at no cost, provided VWG is notified in writing and the product is returned prepaid with proof of proper installation and use. VWG's liability is limited to repair or replacement and excludes labor, incidental, or consequential damages. For full warranty details, please visit VistaWaterGroup.com/warranty.