

DrainHub

Multi-Port Drain Adapter



4 HOLE: DH154
8 HOLE: DH158


The Ultimate Drain-Space Saver.

Every plumber and service tech knows the frustration: appliances like sterilizers, instrument washers, water purification systems, and more all require drain connections—and it's easy to run out of space fast.

Thankfully, now there's the DrainHub multi-port drain adapter. This patent-pending device accepts up to eight drain connections in one small hub—saving space, cost and time!

DrainHub is easy to install, and its 1/2" NPT threaded ports accept a variety of push-to-connect, compression, and hose barb adapter fittings.

Dimensions

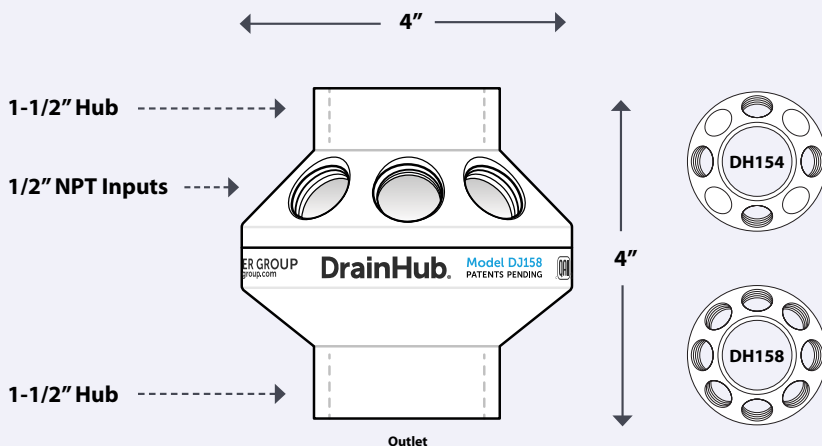

Materials

- › Schedule 40 PVC
- › 1/2" NPT threaded inputs (2, 4 or 8)
- › Top & bottom slip hubs accept 1-1/2" pipe
- › Bottom hub O.D. glues into 2" coupling


Codes and Standards Compliance

- › ASTM D2665 (PVC)
- › ASTM F1498 (Threads)
- › ASME A112.18.2-2015
- › FDA Title 21 Material

Required Fittings


Connection	Fitting Part #
VistaPure	1 x S4730
VistaCool Single (V7501)	1 x S4730 & 1 x S8218 (straight) or S8318 (elbow)
VistaCool Double (V7502)	2 x S4730 & 1 x S8218 (straight) or S8318 (elbow)
BRAVO	1 x S8214 (straight) or S8314 (elbow)
HYDRIM L110, C61, 112	1 x S8222 (straight) or S8322 (elbow)
StatClean	1 x S8218 (straight) or S8318 (elbow)
-	Plug (1/2" NPT) S8015

DrainHub Position Under Sinks

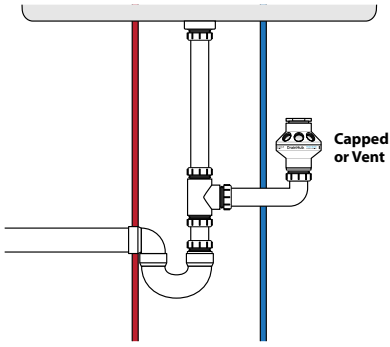


Method A

Installation beside the main drain line can offer maximum flexibility and can be achieved with the use of a simple drain tee adapter fitting.

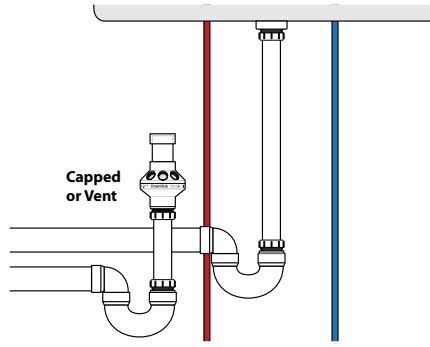

Method B

When possible, as in cases of new construction, it can be beneficial to run parallel drain waste systems to separate waste from the sink from other appliances and devices.

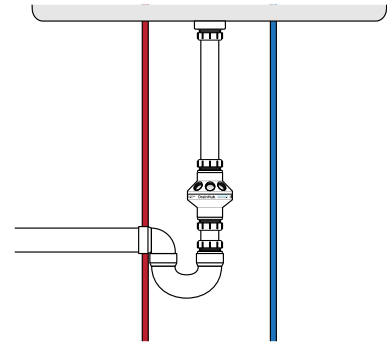


Method C


When necessary, it is possible to install the DrainHub fitting directly in the main drain line under a sink. However, this position can result in more audibly noticeable drainage of waste containing a significant amount of air.

Connection to Waste Lines


The top and bottom hubs of the DrainHub fitting are designed to accommodate standard 1-1/2" PVC pipe or standard 1-1/2" trap adapters for use with 1-1/2" or 1-1/4" tubular waste lines.

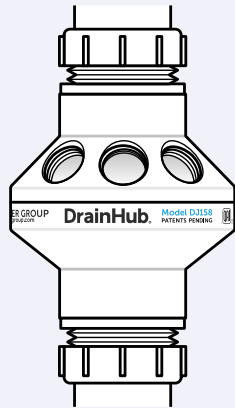

Can Be Connected with Trap Adapters

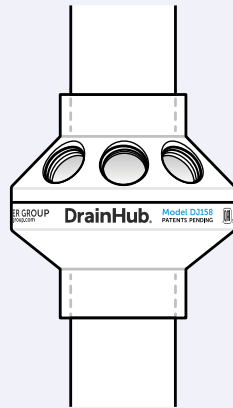


1-1/2" Pipe Fits Inside Hubs

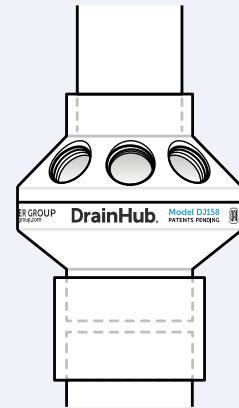

Outlet Hub Fits Into 2" Coupling for 2" Discharge Port

A variety of compatible 1/2" NPT threaded push-to-connect, compression, and hose barb adapter drain fittings are available.



Important: Always install a 1/2" NPT threaded plug in any unused port(s) of the DrainHub, and always follow applicable local plumbing codes.

Manufactured for:
Crosstex International, Inc.
 1625 Pinnacle Peak Rd
 Phoenix, AZ 85027 USA
 T +1 (888) 276-7783
 HuFriedyGroup.com

Distributed by:
SciCan Ltd.
 1440 Don Mills Rd
 Toronto, ON M3B 3P9, Canada
 TF +1 (800) 667-7733
 T +1 (416) 445-1600
 customerservice@scican.com

Distributed by:
Coltene/Whaledent Inc.
 235 Ascot Pkwy
 Cuyahoga Falls, OH 44223, USA
 TF +1 (800) 221-3046
 uscustomerservice@scican.com

For more information, visit www.scican.com

SciCan | Your Infection Control Specialist

All Vista product names are trademarks of HuFriedy Mfg. Co. LLC, its affiliates or related companies, unless otherwise noted. Marks not registered in all jurisdictions.